


*Necessary preliminary tasks:*

- Remove front seat

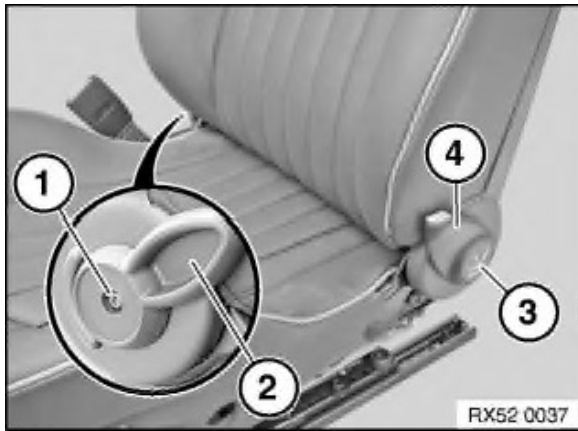

Release Torx screw (1) from lever (2) for backrest angle adjustment.

Tightening torque 52 13 2AZ .


Pull off lever (2).

Lever out cover (3) with plastic wedge.


Release Torx screw underneath from lever (4) for Easy Entry.

Tightening torque 52 13 2AZ .

Pull off lever (4).

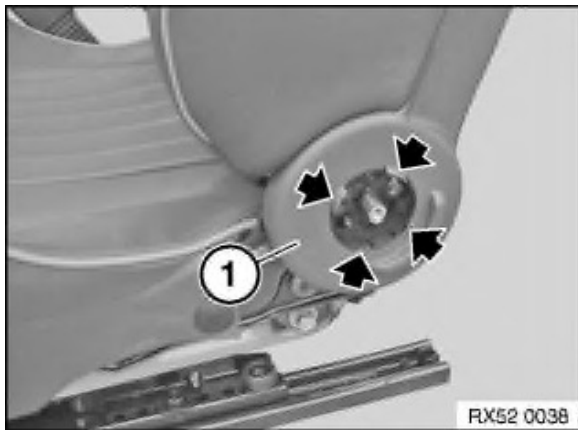

Unclip rear panel (1) on left and right from backrest frame.

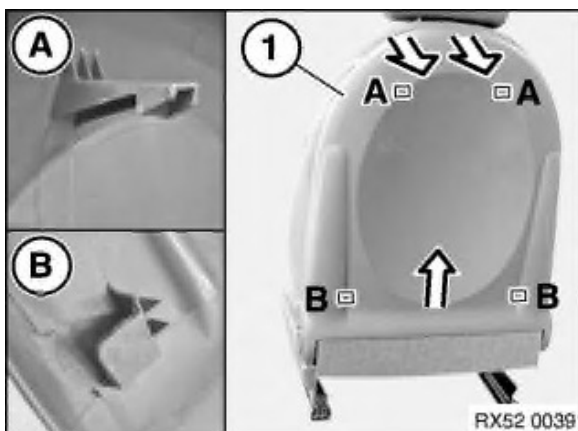

Unclip rear panel (1) from backrest frame in area (A).

Remove rear panel (1) in area (B) from backrest frame in upward direction.