
MOBILITY

Tail lamps in split doors

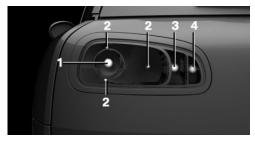

- 1 Turn signal
- 2 Tail lamps
- 3 Rear fog lamp
- 4 Reversing lights

LED tail lights in the split doors



- 1 Turn signal
- 2 Tail lamps
- 3 Rear fog lamp
- 4 Reversing lights

Tail lamps in bumpers



- 1 Tail lamps/brake lights
- 2 Turn signal

In addition, the tail lamps in the bumper assume the functions of tail lamp and turn signals, if the split doors are open.

Tail lamps in split doors

Follow the general instructions on lights and bulbs, refer to page 204.

Turn signals/tail lamps

Bulbs: P21W/W5W

- 1. Opening split doors, refer to page 41.
- 2. Remove left or right cover. If necessary, it is then possible to pry the cover off using a screwdriver or a similar plastic tool.



3. Press the latches together upward, arrow 1, and remove the bulb holder.

Online Edition for Part no. 01 40 2 964 571 - X/15