



Necessary preliminary tasks:

Remove glovebox light.

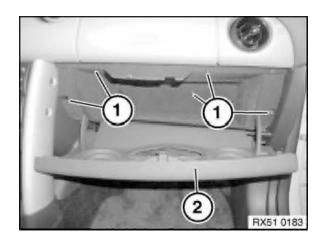

Release screws (1). Remove glovebox (2).

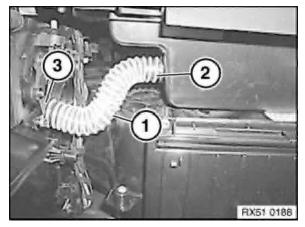

Installation:

Connect cold-air duct (1) correctly to cold-air control (2) and heater (3).