

**SUBJECT****Seat Heaters Too Hot or Too Cold****MODEL**


Cooper, Cooper S

SITUATION

Some owners may complain that their seat heaters get too hot, or they don't get hot enough.


CORRECTION

In case of a customer complaint, install an adapter cable to increase or reduce heat output, as required.

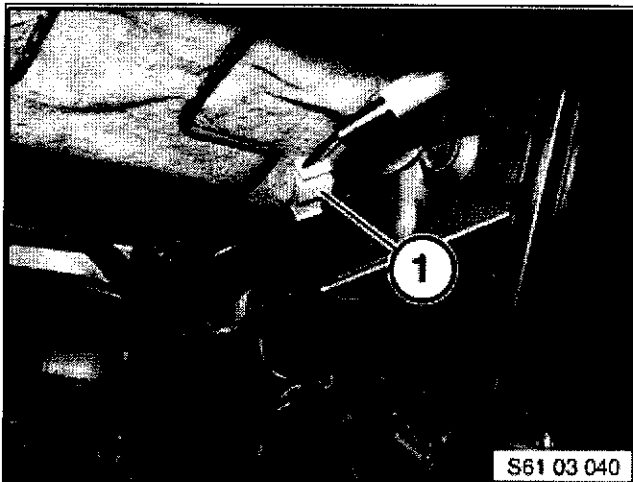
PROCEDURE

Adjust the seat to the full forward, full up position, and fold the backrest forward.

Locate and disconnect the white connector for the seat heater (1).

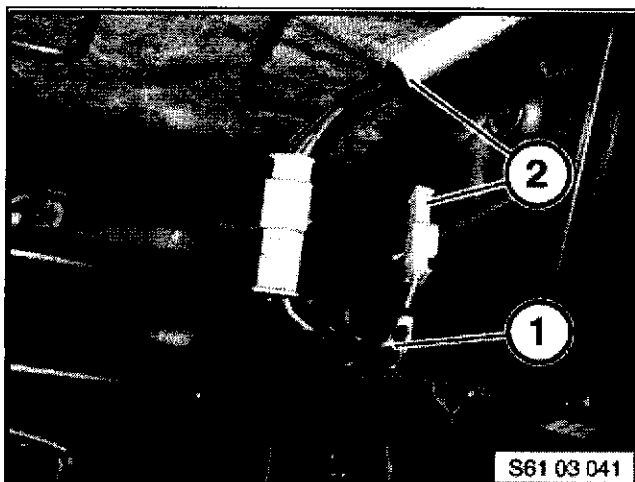

Install adapter cable (1) into existing harness (2).

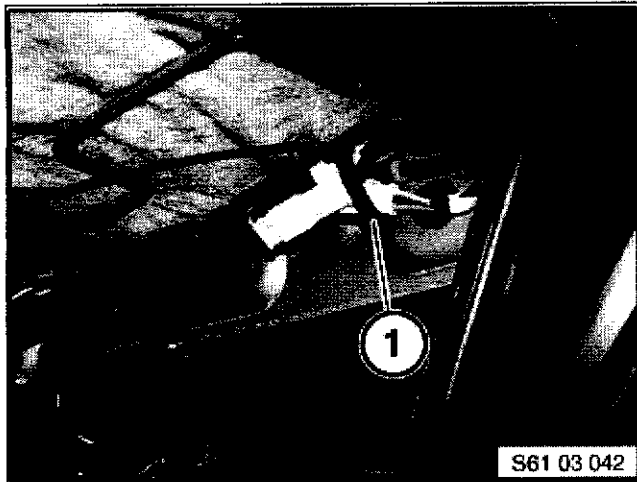

Loop the additional length of the harness and wire tie (1) it in place.

PARTS INFORMATION

Part Number	Description	Quantity
61 10 0 152 025	Adapter cable to REDUCE heat output	1 or 2
61 10 0 152 026	Adapter cable to INCREASE heat output	1 or 2

WARRANTY INFORMATION

Covered under the terms of the New Vehicle Limited Warranty.

Defect Code	61 12 93 74 00	
Labor Operation:	00 54 252	Main Work: Install adapters in both front seats
Labor Allowance:	4 FRU	
Parts Allowance:	As required (see Parts Information)	
Labor Operation:	+00 54 941	Associated Work: Install adapters in both front seats
Labor Allowance:	2 FRU	
Parts Allowance:	As required (see Parts Information)	